


Enviromate LED Ceiling Light INSTRUCTION GUIDE

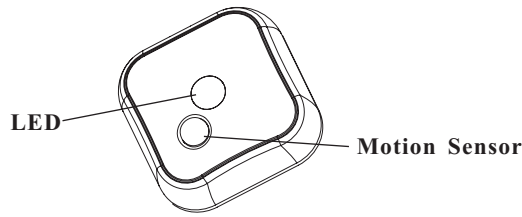

CEILING LIGHT

CEILING LIGHT FEATURES

Motion Sensor Activated—Your Ceiling Light has a sensitive motion sensor that will activate the LED only when motion is detected. Light shuts off automatically after no motion is detected for 25 seconds.

Light Sensor—Your Ceiling Light goes on only in darkness to conserve battery life.

Mount to Wall or Ceiling Options—Use 2 screws to mount your Ceiling Light to the wall.

Weatherproof Design—Your Ceiling Light can be mounted outdoors and even in a shower.

WARNING

- Use only new alkaline or lithium C-Cell batteries with 1.5V rating. Do not mix old and new batteries. Install batteries with polarity in correct position.
- Follow battery instructions for proper disposal and cautions.
- Light takes approximately 1 minute to activate once batteries are inserted.
- **Light will only go on in complete darkness.**

Thank you for purchasing the Ceiling Light. We are committed to eliminating darkness by using the latest in light-emitting diodes (LEDs). LEDs are the most efficient and durable light sources available. We are certain your Ceiling Light will contribute to a safer environment and provide light where you need it at a very reasonable cost.


ENCLOSED YOU WILL FIND:

- Motion Sensor Ceiling Light
- Mounting Bracket
- 2 Screws and 2 Anchors

INSTALLATION INSTRUCTIONS


BEFORE YOU MOUNT YOUR CEILING LIGHT:

Illustration 1

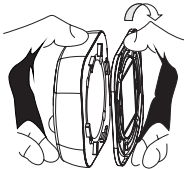


Remove Mounting Bracket from back of Ceiling Light as shown in **Illustration 1**.

Illustration 2

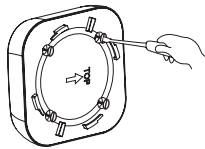


Remove back plate of Ceiling Light by removing thumb screws (**Illustration 2**), then open it.

Illustration 3

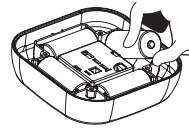

Insert 4 Fresh C batteries as shown in **Illustration 3**.


Illustration 4

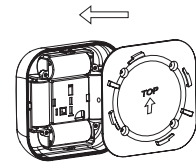

To close, align Tab with Notch as shown in **Illustration 4**. Then insert thumb screws and tighten them.


MOUNTING YOUR CEILING—INDOOR OR OUTDOOR:

Illustration 5

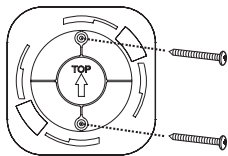

Determine location for mounting Ceiling Light. If mounting to a wall position so word "Top" is at highest point. The side with the word "Top" should always face to you. Drive two screws (included) through holes of Mounting Bracket to secure (**Illustration 5**).

Illustration 6

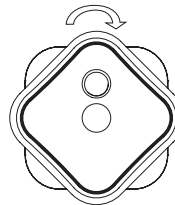

Position motion sensor lens towards the area of expected motion (**Illustration 6**). Align tabs with grooves and twist Ceiling Light clockwise until it stops.

IMPOTANT NOTES:

- Please use only new alkaline or lithium C-Cell batteries with 1.5V rating.
- Do not mix old and new batteries.
- Install batteies with polarity in correct position as shown.
- Ceiling Light only goes on it complete darkness. Test in dark room or drawer.

ENVIROMATE

Products Corp.

www.enviromate.com