



Flashlight



Power Failure Light



Induction Charge



Nightlight

FOR INDOOR USE ONLY/DO NOT USE OUTDOORS

- Power failure light
- 3 LEDs
- Handheld light must rest in induction charging base to charge
- Charging base rotates 90° to fit all AC 120V ~ 60Hz wall sockets
- Light automatically turns on during power outages (after initial charge)
- Slide button on handheld light activates 3 LEDs
- Rechargeable Lithium Ion battery
Battery capacity: 120mAh
Recharging time is 15 hours
- Handheld light lasts up to 7 hours
- LED nightlight
 - ON: Nightlight ON (permanently)
Power failure light on Standby
 - OFF: Nightlight OFF
Power failure light OFF
 - AUTO: Nightlight turns ON when room darkens (light sensor)
Power failure light on standby (Recommended position)



⚠️ WARNING

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS
WARNING - When using electric appliances, basic precautions should always be followed. This product is not a toy and is NOT INTENDED FOR YOUNG CHILDREN. Choking Hazard: this product contains small parts.
Read all the instructions before using the appliance.

- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- Use only the charger supplied by the manufacturer to recharge.
- For a portable appliance - To reduce the risk of electrical shock, do not put the unit in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Dry location use only ■ Do not use outdoors. ■ For household use only.

■ CAUTION: Risk of Electric Shock and Fire Hazard.

This is not a toy and is not intended for use by children.

For safe use, plug only into exposed wall outlets where a device is ventilated and cannot contact bed covering or other material.

Do not use with extension cords.


For adult use only.

DO NOT ATTEMPT TO REMOVE TOP ON HANDHELD LIGHT. IT IS PERMANENTLY AFFIXED . (LED bulbs do not need replacement)

OPERATING INSTRUCTIONS

To obtain optimal result charge the Mini Power Failure Light 24 hours before using.
 Must be charged in AUTO or ON position.
 Do not charge in OFF position.

Insert charging base UPRIGHT into wall outlet and rotate right if necessary.

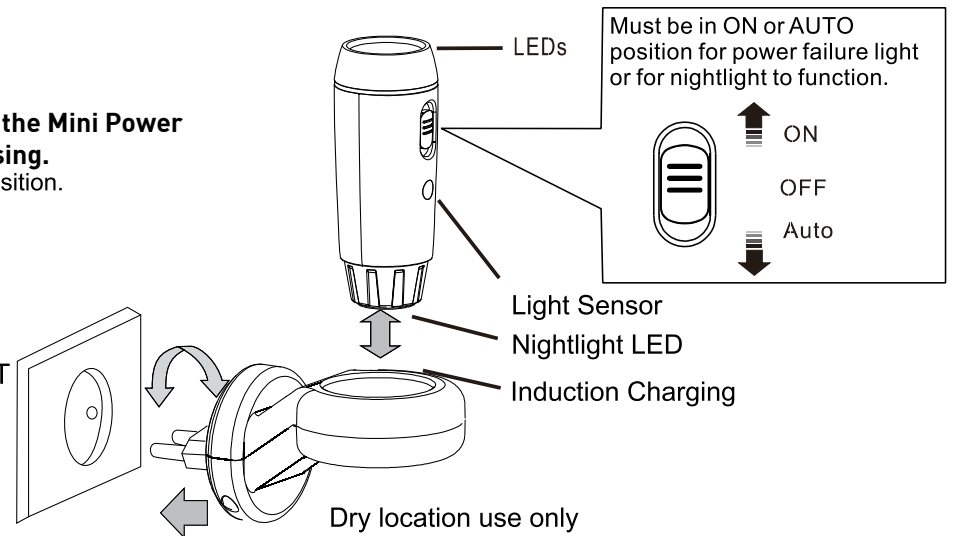

* When removed from its base, bottom portion of handheld light is slightly warm to touch. This is normal and will dissipate after a few minutes.